


# WiFi Recovery

This procedure explains how to connect a Chromebook to the temporary Recovery network to recover from the loss of WiFi settings. This will allow normal use of the Chromebook until a fix can be pushed.

1. Power on the Chromebook
2. A **Network not available** screen should be displayed
3. From the dropdown, select **Recovery**

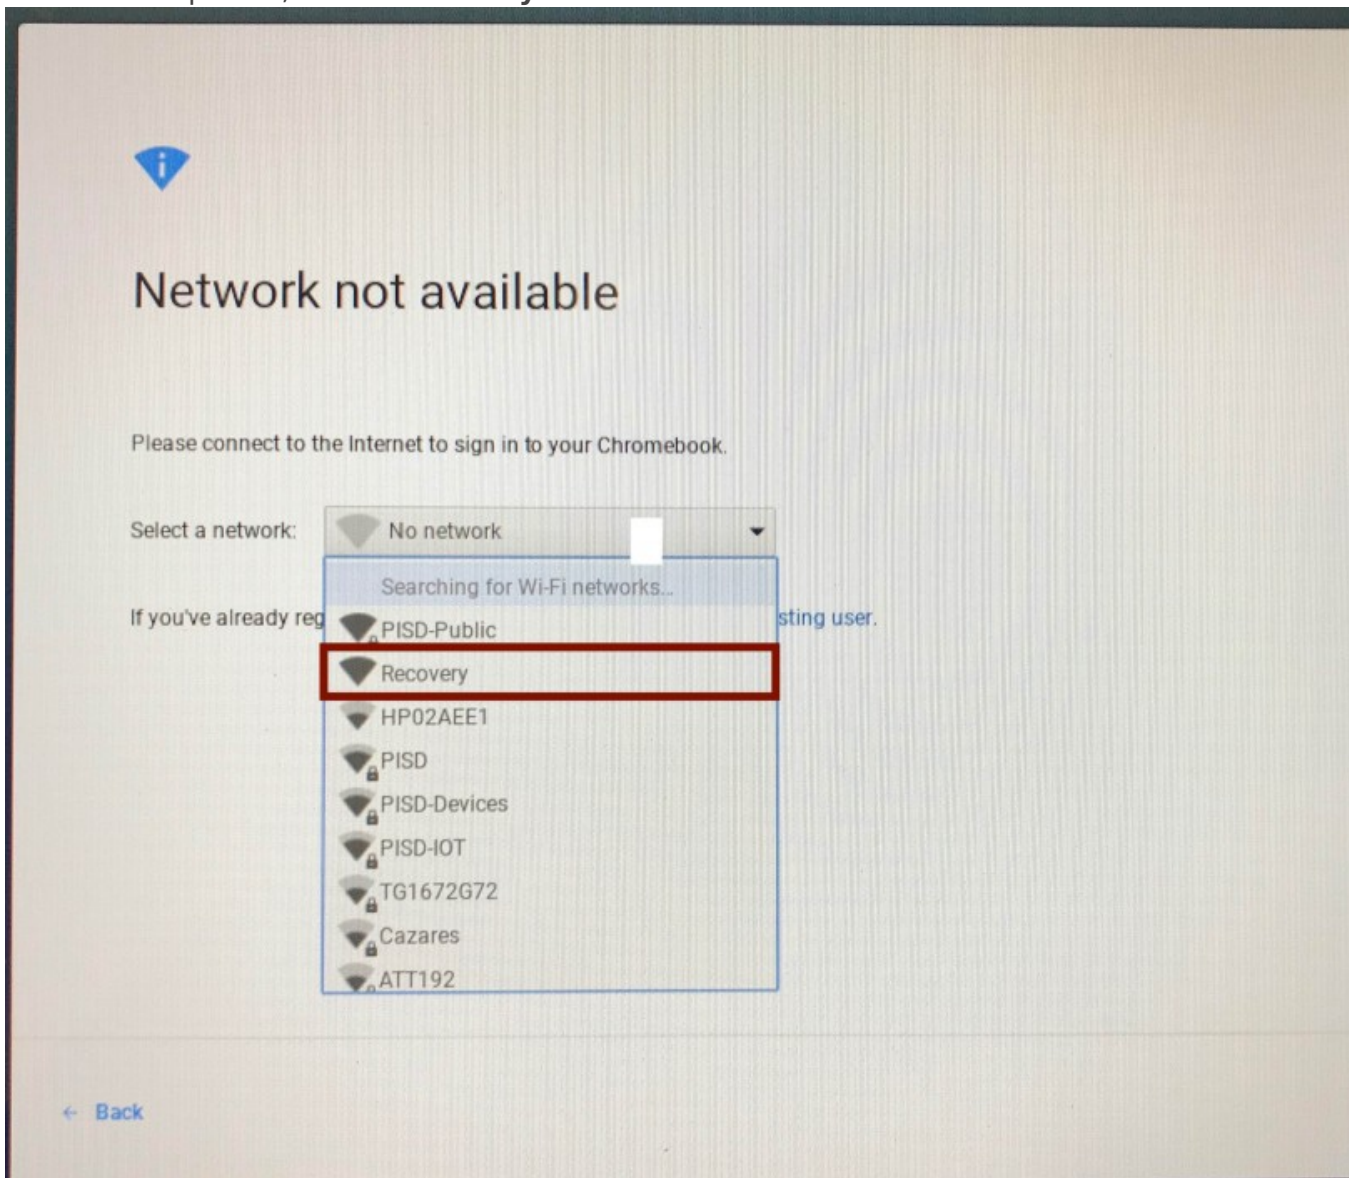

4. Once the network connects, a login screen will appear

---

Revision #4

Created 5 December 2017 18:43:43 by Admin

Updated 5 December 2017 19:31:52 by Admin