
# WiFi Recovery

This procedure explains how to connect a Chromebook to the temporary Recovery network to recover from the loss of WiFi settings. This will allow normal use of the Chromebook until a fix can be pushed.

1. Power on the Chromebook
2. A **Network not available** screen should be displayed
3. From the dropdown, select **Recovery**

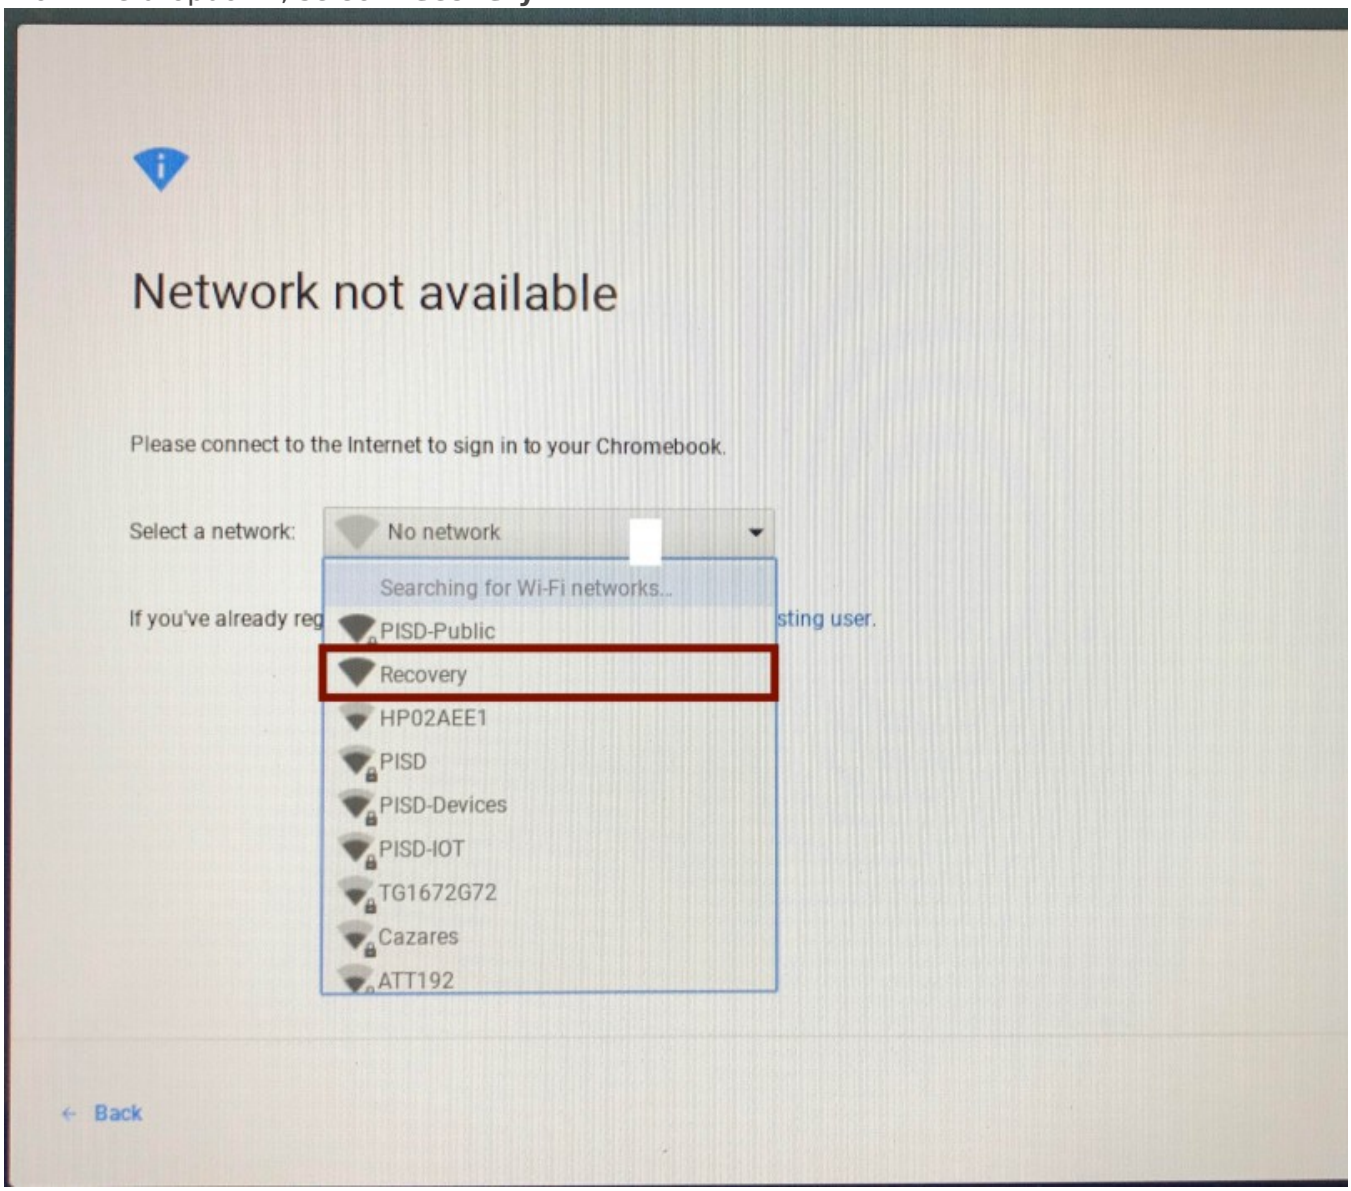


4. Once the network connects, a login screen will appear

---

Revision #4
Created 2017-12-05 18:43:43 UTC by Admin
Updated 2017-12-05 19:31:52 UTC by Admin